








A	End caps	End caps available in plastic or aluminium.		Product	: Name		Project Name	Creation Date	Page	Scale	Projection
<u> </u>	Install	Never strike extrusion directly with a hammer or rubber mallet. Use a pine plank between the tool and the extrusion to avoid surface damage or denting.	Ever Art Wood - Kabeba			bari	Oki 100x100		1 of 2	1:2	⊕ □
Λ		ecure to batten with screw or exterior grade adhesive (Sikaflex), OR crew fix or apply exterior grade adhesive (Sikaflex) to secure cap to batten.	Approval	Chek	Drawing	Design	Customer	Distributor		Manufacturer	
No.	DATE	Sector in or apply executor grade administre (sixtures) to sectore cap to batteri.	1					CO	veť	" T	акаѕно

Kabebari batten detail

Profile: Oki 100x100mm

Installation detail 🔼



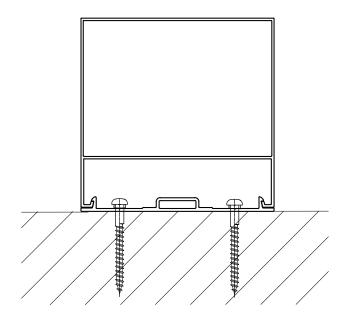





Kabebari Batten Installation Guide

- Aluminium can be damaged if mishandled. Never strike directly with a hammer or rubber mallet. Use a pine plank between the striking rubber mallet and the extrusion to avoid surface damage or denting.
- Cut aluminium with a drop saw using an aluminium blade.
- Always cap ends of extrusions with supplied end caps or a flashing to avoid moisture ingress.
- Plastic end caps must be securely inserted with screws supplied or sikafelx applied to the inside of the extrusion before inserting. This will prevent slippage of the extrusion.
- Metal end caps (painted) must be screwed to the extrusion.
- All end caps can only be applied to straight 90 degree cuts. They cannot be applied to angle end cuts.
- Ensure appropriate screws are used to suit the substrate you are fastening to. It is important to use stainless steel or bi-metal screws for all metal surfaces impacted when fastening (i.e. furring channels, top hats, steel frames). This will prevent galvanic reaction between the screw/substrate and aluminium extrusion.
- Fasten at maximum 1 metre spans. Please contact Covet for further information.
- Always fasten the male (base) section first. The female (top section) clips over the top. They can also slide on if necessary.

A	End caps	End caps available in plastic or aluminium.	Product Name				Project Name	Creation Date	Page	Scale	Projection
<u> </u>		Never strike extrusion directly with a hammer or rubber mallet. Use a pine plank between the tool and the extrusion to avoid surface damage or denting.	Ever Art Wood - Kabebari			bari	Oki 100x100		2 of 2	1:2	₩□
Λ	End caps	Secure to batten with screw or exterior grade adhesive (Sikaflex), OR Screw fix or apply exterior grade adhesive (Sikaflex) to secure cap to batten.	Approval	Approval Chek		Design	Customer	Distr	ibutor	Manufacturer	
No.	DATE	Section of apply exected grade duties re (smaller) to sectic cap to success						covet		"-" Takasho	