

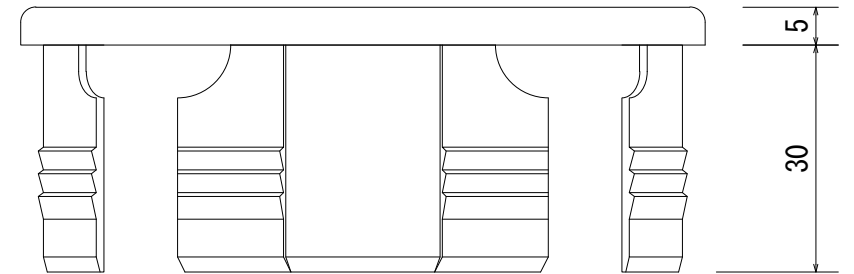


Koshi batten detail

Profile: Round 90

Weight: 1.493 kg/m

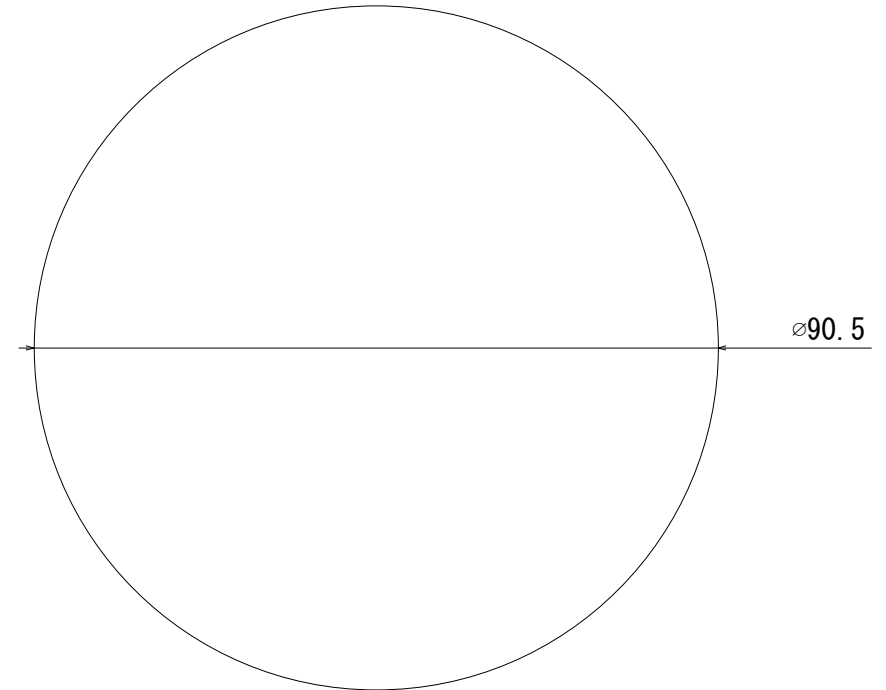

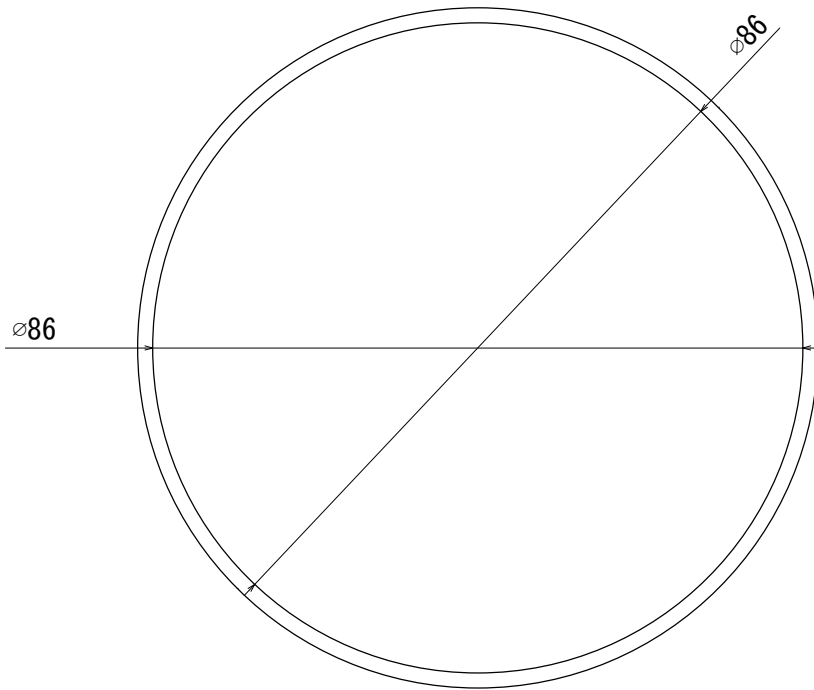


Batten thickness: 2.0mm



		Product Name				Project Name		Date	Page	Scale	Projection	
		KOSHI ROUND 90MM						11/2021	1 of 2	1:1		
	Install	Never strike extrusion directly with a hammer or rubber mallet. Use a pine plank between the tool and the extrusion to avoid surface damage or denting.				Approval	Check	Drawing	Design	<div style="display: flex; justify-content: space-between;"> <div style="text-align: center;"> </div> <div style="text-align: center;"> Covet International 27 / 131 Hyde St Yarraville VIC 3013 </div> <div style="text-align: center;"> T +613 9398 8128 info@covet.com.au www.covet.com.au </div> </div>		
	End Caps	Screw fix or apply exterior grade adhesive (Sikaflex) to secure cap to batten.										

Koshi Batten Installation Guide

- Aluminium can be damaged if mishandled. Never strike directly with a hammer or rubber mallet. Use a pine plank between the striking rubber mallet and the extrusion to avoid surface damage or denting.
- Cut aluminium with a drop saw using an aluminium blade.
- Always cap ends of extrusions with supplied end caps or a flashing to avoid moisture ingress.
- Metal end caps (painted) must be screwed to the extrusion.
- All end caps can only be applied to straight 90 degree cuts. They cannot be applied to angle end cuts.
- Ensure appropriate screws are used to suit the substrate you are fastening to. It is important to use stainless steel or bi-metal screws for all metal surfaces impacted when fastening (i.e. furring channels, top hats, steel frames). This will prevent galvanic reaction between the screw/substrate and aluminium extrusion.
- Fasten at maximum 1 metre spans. Please contact Covet for further information.

		Product Name				Project Name	Date	Page	Scale	Projection				
		KOSHI ROUND					11/2021	2 of 2						
						 <div style="display: flex; justify-content: space-between; font-size: small;"> <div> Covet International 27 / 131 Hyde St Yarraville VIC 3013 </div> <div> T +613 9398 8128 info@covet.com.au www.covet.com.au </div> </div>								
	Install	Never strike extrusion directly with a hammer or rubber mallet. Use a pine plank between the tool and the extrusion to avoid surface damage or denting.									Approval	Check	Drawing	Design
	End Caps	Screw fix or apply exterior grade adhesive (Sikaflex) to secure cap to batten.												